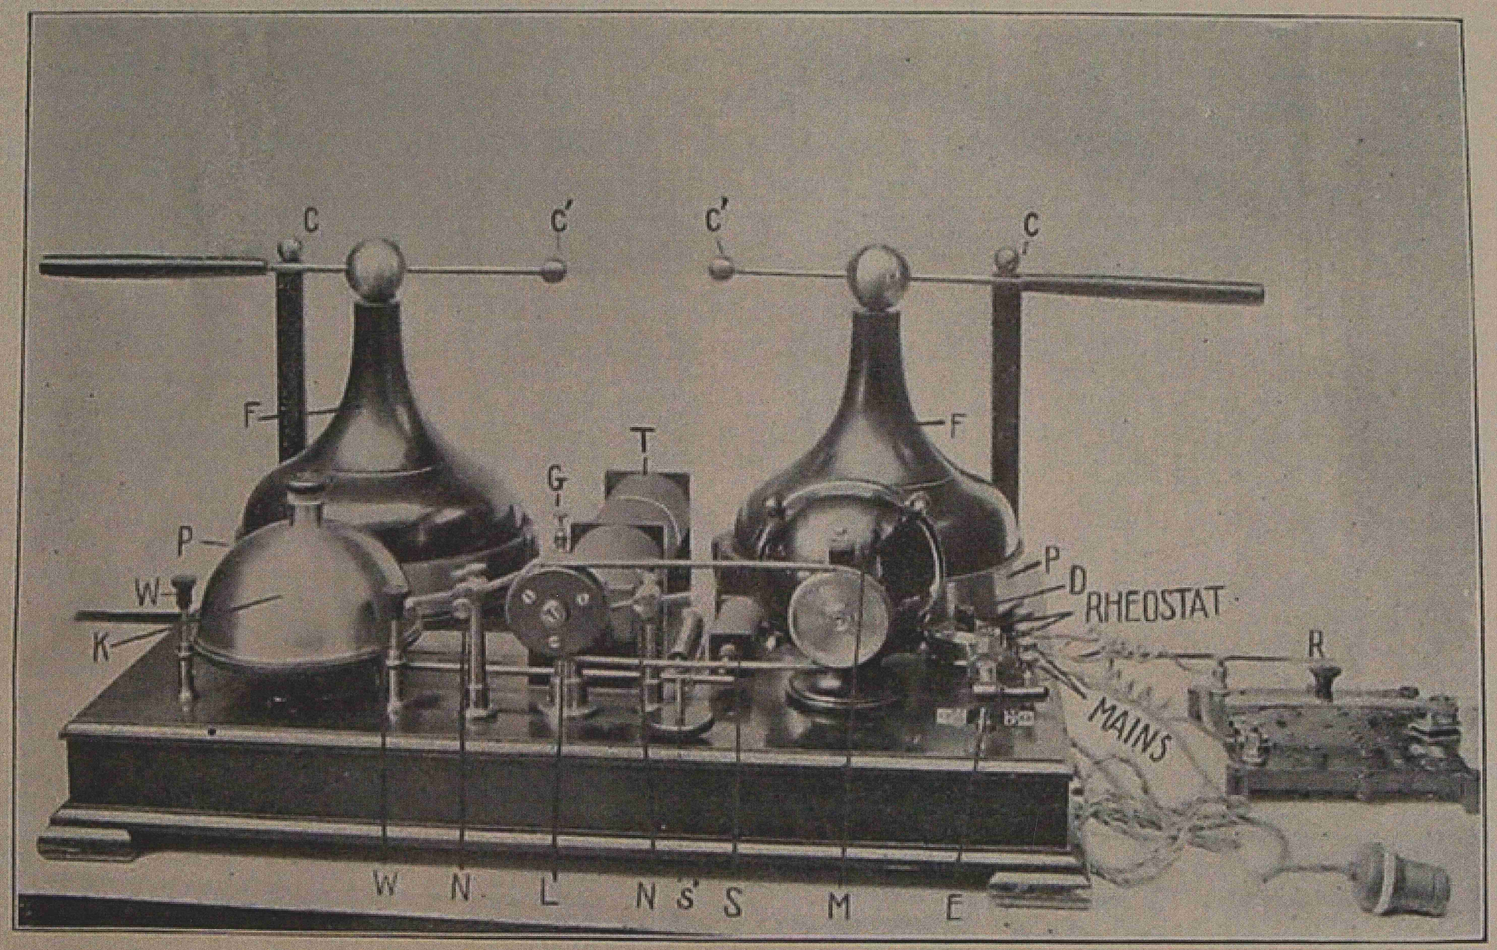

The Kinraide High Frequency Coil, Direct Current

WW — Thumb Screws.
D — Starts motor.
E — Starts current through Coil.
R — Rheostat.
G — Post for ground connection.
NN — Brushes.
L — Break Wheel.
T — Transformer.
FF — Secondary Coil Cases.
M — Motor.
C'C' — Poles for discharge of secondary.
CC — For attaching wires of tubes and electrodes.
K — Water Pot, for cooling plates.
S' — Adjusting Screw.
S — Solenoid.
PP — Primary.